

## FDR Design, Inc. Pushbutton selection guide

Please notice there are several different styles of each button. To identify the correct style when selecting your pushbutton, please note if there is a raised silver bezel or a flat black bezel.

### Maintained Pushbuttons

Used with:

- All models
  - Main power
- RSGz 90
  - 40/90
  - One hole filling
- RSGz 175
  - 40/175
- All RSGz
  - Small IG
- RSGh
  - One hole filling

[Maintained Pushbutton Actuator, Green](#)  
[Part#: 11244](#)

[Power On / Off Switch, Small IG](#)  
[Part#: 11160](#)

[Green Maintained Pushbutton N.O.](#)  
[Part #11952](#)



---

### Momentary Pushbuttons Green

Used with:

- All models
  - Cycle start/stop
- ILT-C(P)
  - Pump, Print, Gas

[Momentary Pushbutton Actuator, Green](#)  
[Part#: 11245](#)

[SG Green Switch with Lamp](#)  
[\(Momentary\) \(Old Style\)](#)  
[Part #11162](#)

[Green Maintained Pushbutton N.O.](#)  
[Part #11952](#)



---

### Momentary Pushbuttons Red

Used with:

- All RSGz
  - Cycle stop
- Older RSGd and RSGi models
  - Cycle stop

[Momentary Pushbutton Actuator, Red](#)  
[FDR Part # 11250](#)

[Red Switch with Lamp](#)  
[\(Momentary\) \(Old Style\)](#)  
[Part #11161](#)

[Momentary N.C. Red Pushbutton](#)  
[Part #11951](#)



# FDR Design, Inc. Pushbutton selection guide

## Replacement Parts Lenses

[Green lens cap for 11244 and 11245](#)  
[Part #10659](#)



[Pushbutton Lens / Filter – Red \(With Socket\)](#)  
[Part #11165](#)



[Pushbutton Lens / Filter – Green \(With Socket\)](#)  
[Part #11164](#)

 


## Lamps

[Green LED bulb \(lamp\)](#)  
[\(For 11244 and 11245\)](#)  
[Part #11246](#)



[Green LED bulb \(lamp\)](#)  
[\(For 11160, 11161 and 11162\)](#)  
[Part #11163](#)



[Red LED bulb \(lamp\)](#)  
[\(For 11250\)](#)  
[Part #11247](#)

